

## User Guide DataShuttle DS07

### Contents:

- USB 2.0 Multislot Card Reader/Writer Multi-in-1
- USB 2.0 Connection Cable
- User Guide

### Features

- Supports over 72 types of flash card
- 4 slots: Memory Stick, Compact Flash, SD/MMC, XD
- SDHC card supported
- High speed USB 2.0
- Transfer rates: USB v 2.0 up to 480 Mbps, USB v1.1 up to 12 Mbps
- Drag and Drop between cards
- Hot Swapping support
- Power voltage: 5V DC by USB port
- Power consumption: 100 mA
- Dimension: L70xW40xH13 (mm)

### Card types supported:

- **MS Slot:** MS, MS MagicGate, MS PRO, MS PRO(MG), Extreme MS PRO, Extreme III MS PRO, HS MS Pro, HS MS MG Pro, MS Duo, MS Duo(MG), MS PRO Duo, MS PRO DUO(MG), HS MS Pro Duo, HS MS MG Pro Duo, MS Select, MS Pro Ultra II, MS Pro Duo Ultra II, MS ROM, \*M2 (Micro MS), MS Pro MG Extreme, MS Pro MG Extreme III, MS Duo MG High Speed, MS Pro Duo MG Ultra II, MS Pro MG Ultra II
- **CF Slot:** CF Type I, CF Type II, Hitachi Microdrive, CF 16GB, IBM Microdrive, Magiastor, EXTREME CF, Extreme III CF, ULTRA CF, ULTRA II CF, ULTRA-X CF, HS-CF, CF I Pro, CF I Pro II, CF I Elite Pro II, CF I Picture
- **SD/MMC Slot:** SD, SD 2.0, SD HC class 2, SD HC class 4, SD HC class 6, \*Micro SD HC class 2, \*MicroSD HC class 4, \*MicroSD HC class 6, Extreme SD, Extreme III SD, ULTRA SD, ULTRA II SD, ULTRA II SD plus, SD ELITE PRO, \*Mini-SD, MMC, MMC Plus, \*MMC mobile, \*RS MMC, \*RSMCMC mobile, HS MMC, \*HS RS MMC, DV-RS-MMC, \*T-Flash, \*C-Flash, \*MMC Micro, \*Micro SD, SD Pro, SD High Speed 150X, MMC 4.0
- **XD Slot:** M XD, H XD

\* - adapter required

**Operating systems:** Support Windows® Vista/XP/2000/Me, Mac® OS 9.0 or above and Linux® kernel 2.4 or above without USB device driver. Support Windows® 98 with USB device driver.

**System Requirements:** Pentium II 300 MHz (or higher) including USB Port v 2.0 or 1.1.

### Hardware Connection Guide

- First plug the USB connector cable provided to the USB port on the Laptop/PC. Then connect the USB cable connector to the card reader/writer.
- The operating system will auto detect the device and make necessary installation.
- Windows 98 requires a device driver, which can be downloaded from [www.digitex-europe.com](http://www.digitex-europe.com).

### Attention:

- Do not unplug the card reader if the LED indicator is flashing. This means that the card reader is reading or writing information from or to the memory card and unplugging the device could damage the information or the memory card.
- If the Card Reader does not function efficiently, please make sure the power supply from USB is high enough. Direct connection to the computer is recommended, but if using a USB hub please check the power consumption of other USB items plugged in.
- We recommend the use of the USB cable included in the package.
- Please do not leave the card reader/writer in direct sunlight for extended periods or leave close to electronics which are running with high current.
- This product should only be disassembled or repaired by authorized personnel. Please contact the retailer in case assistance is required.
- If you have any further questions related to the installation of this product you may contact us via e-mail on [info@digitex-europe.com](mailto:info@digitex-europe.com).

### Warranty

Product is covered by a 1 year warranty. If this product is found to be defective, it will be replaced with no cost for you. You may return it with original cash register receipt to the place of purchase. This warranty does not cover normal wear or to damage resulting for abnormal use, misuse, abuse, neglect or accident. Digitex will not be liable for any incidental, consequential or special damages, however caused, for breach of warranty or otherwise and is solely limited to product repair or replacement.